

MANUAL

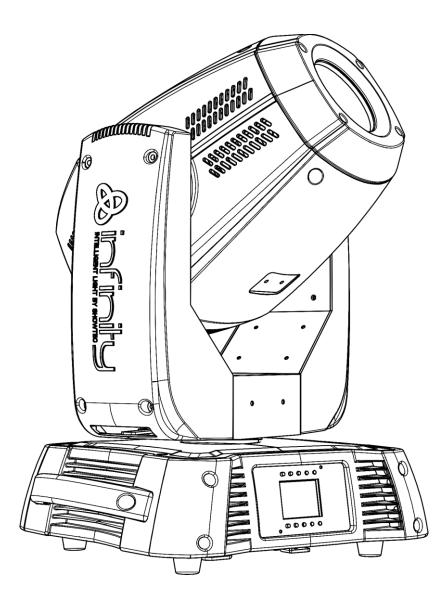




Table of contents

Warning	2
Safety Instructions	
Operating Determinations	
Rigging	4
Return Procedure	6
Claims	6
Description of the device	
Frontside	
Backside	9
Installation	10
	10
Set Up and Operation	
Control Modes	
One Infinity (Built-in Programs)	
Multiple Infinitys (Master/Slave control)	
Multiple Infinitys (DMX Control)	
Fixture Linking	
Data Cabling	
Control Panel	
Control Mode	
DMX Addressing	
Menu Overview	
Main Menu Options	
1. DMX Addressing	
2. Edit Mode	
3. Settings Menu	
3.1. Life Time	
3.1.1. Set Password	
3.2. Reset	
3.3. Factory Settings	
4. Built-in Programs	
5. Test Menu	
6. System information	
DMX Channels	
27 channels	
21 channels Channel settings	
Channel serlings	
Maintenance	
Replacing a Fuse	
Replacing a Gobo From the Rotating Gobo Wheel	
Troubleshooting	
Product Specifications	
Dimensions	<u>.</u>
Dimensions	
Notes	



Warning



For your own safety, please read this user manual carefully before your initial start-up!




Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Infinity iS-250 with PowerCON power cable (1,5 m)
- 2 brackets for truss mounting
- User manual

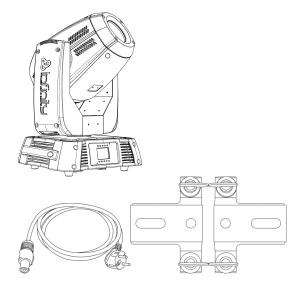

LED Expected Lifespan

LEDs gradually decline in brightness over time. HEAT is the dominant factor that leads to the acceleration of this decline. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal or singular optimum conditions. For this reason when all color LEDs are used at their fullest intensity, life of the LEDs is significantly reduced. If improving your lifespan expectancy is of a higher priority, place care in providing for lower operational temperatures. This may include climatic-environmental and the reduction of overall projection intensity.



CAUTION!

Keep this device away from rain and moisture! Unplug mains lead before opening the housing!



Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



CAUTION! Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!



infinit

Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.
- Never place any material over the lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Never unscrew the screws of the rotating gobo, as the ball bearing will otherwise be opened.
- Do not insert objects into air vents.
- Do not connect this device to a dimmer pack.
- Do not switch the device on and off in short intervals, as this would reduce the device's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes very hot). Allow the fixture to cool for at least 5 minutes before handling.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only use device indoors, avoid contact with water or other liquids.
- Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- If the lens is obviously damaged, it has to be replaced so that its functions are not impaired due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Infinity device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Infinity dealer for service.
- For adult use only. Moving head must be installed out of the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use fuses of same type and rating only.
- The user is responsible for correct positioning and operating of the Infinity. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.





CAUTION! Eyedamages!!! Avoid looking directly into the lightsource!!! (meant especially for epileptics)!!!



Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light output and the illuminated surface must be bigger than 1 meter.
- To eliminate wear and improve lifespan, during periods of non-use, completely disconnect from power via breaker or by unplugging.
- The maximum ambient temperature ta = 40°C must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40° C.
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash etc.

You endanger your own safety and the safety of others!

Rigging


Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.


Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:

- If the Infinity is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the Infinity, with the mounting-bracket, to the trussing system.
- The Infinity must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety cable.
- When rigging, derigging or servicing the Infinity, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

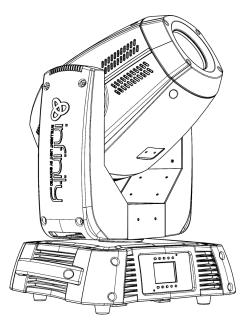


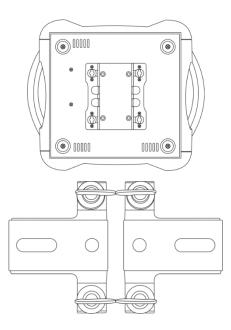

infinit

The Infinity can be placed on a flat stage floor or mounted to any kind of truss with a clamp.

Mounting a clamp to the underside of the Infinity moving head

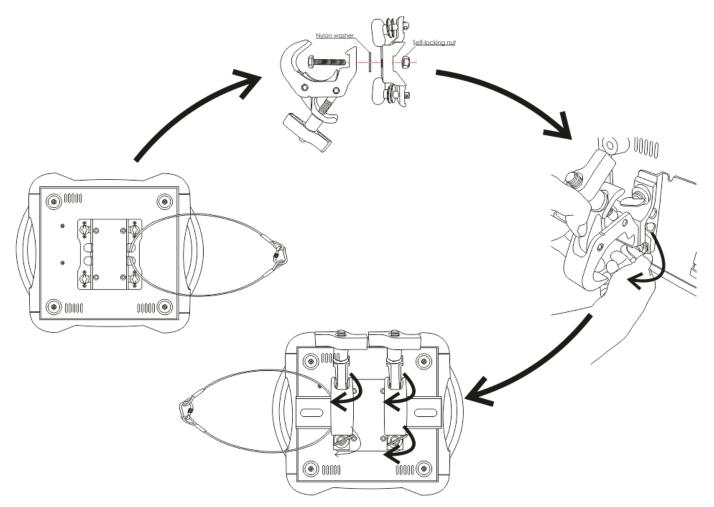

Improper installation can cause serious injuries to people and/or damage of property !



Connection with the mains

Connect the device to the mains with the power-plug. Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
Ν	BLUE	BLACK	SILVER	NULL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!

Improper installation can cause serious damage to people and property!



Return Procedure



Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 01) Your name
- 02) Your address
- 03) Your phone number
- 04) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.



Description of the device

Features

The Infinity iS-250 is a moving head with high output and great effects.

- Input voltage: 100-240V AC, 50/60Hz
- Power consumption: 430W
- Light source: 1 x 250W White LED (LumiEngin)
- Lux @1m: 102400 (12°)
- Beam angle: 12° 27°
- Onboard: Battery-powered full color display including gravity sensor
- Battery lifetime: max 30 days (full charge)
- Control modes: Built-in programs, Master/Slave, DMX-512
- Control protocol: DMX512
- DMX control: 21, 27 channels
- Wireless DMX: available (optional)
- Dimmer: 0-100%
- Strobe: 0-20Hz
- Focus: Motorized
- Iris: Motorized
- Prism: 3-facet rotating prism
- Pan: 540°
- Tilt: 270°
- Pan/Tilt resolution: 16 bit
- Special: Pan/Tilt, Color, Gobo change blackout, User-selectable Pan & Tilt ranges, 540°/360°/180°, Reverse Pan / Tilt movement
- Rotating gobo wheel: 1 glass + 1 plastic + 5 metal gobos (replaceable)
- Gobo size: Glass gobo: 27,7 mm (gobo size); 21 mm (image diameter); 1 mm (gobo thickness) Plastic gobo: 26,7 mm (gobo size); 21 mm (image diameter); 2,4 mm (gobo thickness) Metal gobo: 28,9 mm (gobo size); 21 mm (image diameter); 0,5 mm (gobo thickness)
- Static gobo wheel: 8 metal gobos
- Gobo functions: Gobo-flow effect, gobo shake
- Rotation: Bi-directional
- Color wheel 1: 7 dichroic-filters + white
- Color wheel 2: 7 dichroic-filters + white
- Color functions: Split colors, Rainbow-flow effect
- Color: Black
- Housing: Metal & flame-retardant plastic
- Connection: 3-pin/5-pin XLR data IN/OUT, PowerCON IN/OUT
- Fuse: F7AL/250V
- Dimensions: 346 x 417 x 582 mm (LxWxH)
- Weight: 25,4 kg

Optional accessories

MOD41502 - Wireless DMX upgrade kit



The Wireless DMX upgrade kit should be installed ONLY by a qualified technician. Do not attempt installation yourself!





Frontside

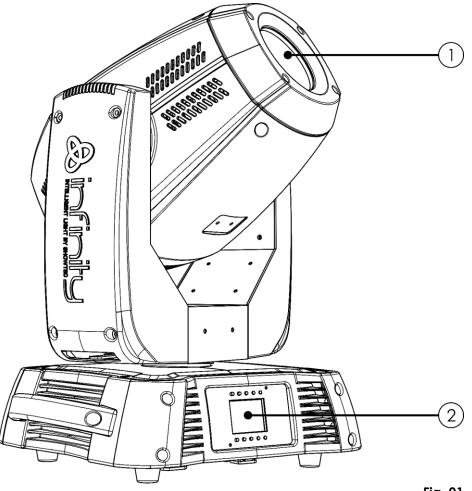


Fig. 01

01) Lens

02) LCD display + control buttons

Backside

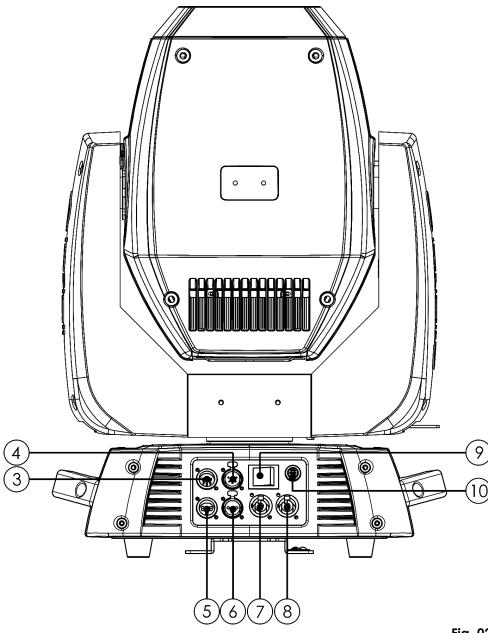


Fig. 02

- 03) 5-pin DMX signal connector IN
- 04) 5-pin DMX signal connector OUT
- 05) 3-pin DMX signal connector IN
- 06) 3-pin DMX signal connector OUT
- 07) 100-240V Neutrik PowerCON IN
- 08) 100-240V Neutrik PowerCON OUT
- 09) Power switch ON/OFF
- 10) Fuse F7AL 250V

NOTE: Knowledge of DMX is required to fully utilize this unit.



Installation

Remove all packing materials from the Infinity iS-250. Check that all foam and plastic padding is removed. Connect all cables.

Do not supply power before the whole system is set up and connected properly. Always disconnect from electric mains power supply before cleaning or servicing. Damages caused by non-observance are not subject to warranty.

Set Up and Operation

Follow the directions below, as they pertain to your preferred operation mode. Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Control Modes

There are 3 modes:

- Stand-alone (built-in programs)
- Master/Slave
- DMX512 (21CH, 27CH)

One Infinity (Built-in Programs)

- 01) Fasten the effect light onto firm trussing. Leave at least 1 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) When the Infinity is not connected by a DMX cable, it functions as a stand-alone device.
- 05) Please see page 18 for more information about the built-in programs.

Multiple Infinitys (Master/Slave control)


- 01) Fasten the effect light onto firm trussing. Leave at least 1 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) Use a 3-pin/5-pin XLR cable to connect the Infinity.

The pins:



- Earth
 Signal (-)
 Signal (+)
- 05) Link the units as shown in fig. 03. Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on page 18 (Built-in programs). This means that you can set your desired operation mode on the master device and all slave devices will react the same as the master device.

Multiple Infinitys (Master/Slave control)

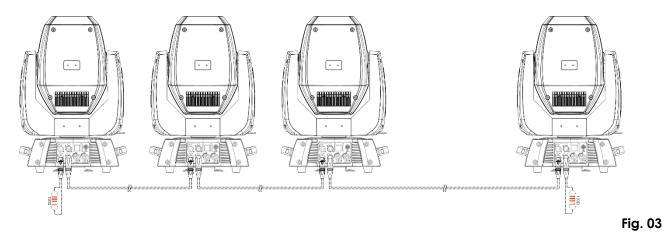




Infinity iS-250

Multiple Infinitys (DMX Control)

- 01) Fasten the effect light onto firm trussing. Leave at least 1 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) Use a 3-pin/5-pin XLR cable to connect the Infinitys and other devices.

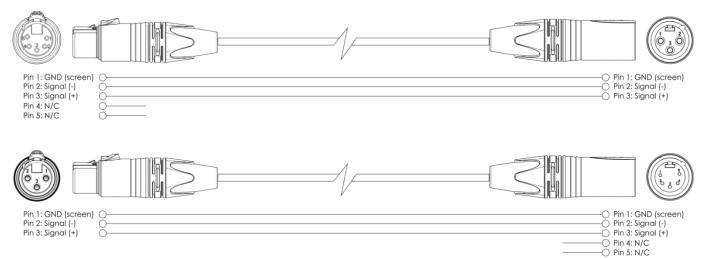

- 05) Link the units as shown in fig. 04. Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
- 06) Supply electric power: Plug electric mains power cords into each unit's PowerCON socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple Infinitys DMX Set Up

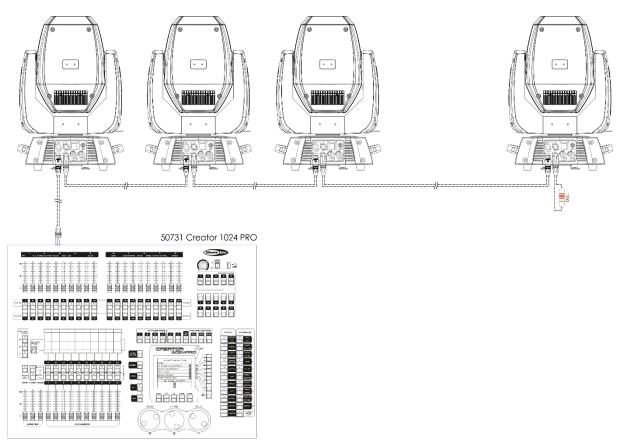


Fig. 04

Sinfinity

Note : Link all cables before connecting electric power

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important:

Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal. Maximum recommended DMX data link distance: 100 meters



Maximum recommended number of fixtures on a DMX data link: 30 fixtures Maximum recommended number of fixtures on a power link @120V: 2 fixtures Maximum recommended number of fixtures on a power link @230V: 4 fixtures

Data Cabling


To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio Certified DMX Data Cables

- DAP Audio Basic microphone cable for allround use. bal. XLR/M 3-pin > XLR/F 3-pin.
 Ordercode FL01150 (1,5 m), FL013 (3 m), FL016 (6 m), FL0110 (10 m), FL0115 (15 m), FL0120 (20 m).
- DAP Audio X-type data cable XLR/M 3-pin > XLR/F 3-pin. Ordercode FLX0175 (0,75 m), FLX01150 (1,5 m), FLX013 (3 m), FLX016 (6 m), FLX0110 (10 m).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5 m), FL713 (3 m), FL716 (6 m), FL7110 (10 m).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL7275 (0,75 m), FL72150 (1,5 m), FL723 (3 m), FL726 (6 m), FL7210 (10 m).
- DAP Audio 110 Ohm cable with digital signal transmission. Ordercode FL0975 (0,75 m), FL09150 (1,5 m), FL093 (3 m), FL096 (6 m), FL0910 (10 m), FL0915 (15 m), FL0920 (20 m).

The Infinity iS-250 can be operated with a controller in **control mode** or without the controller in **standalone mode**.



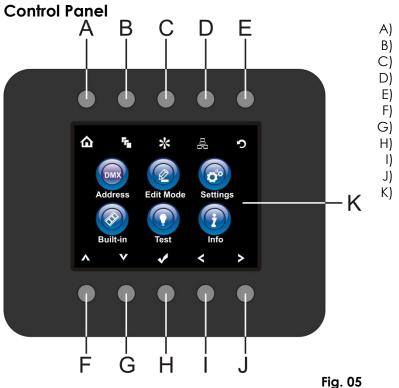

- A) Home button
- B) Edit Menu button
- C) Settings Mode button
- D) Address Setting button
- E) Infinity Logo button
- F) Up button
- G) Down button
- H) OK/ENTER
- I) Left button
- J) Right button
- K) LCD display

Control Mode

The fixtures are individually addressed on a data-link and connected to the controller. The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

DMX Addressing

The control panel on the front side of the base allows you to assign the DMX fixture address, which is the first channel from which the Infinity will respond to the controller.

Please note when you use the controller, the unit has 27 channels.

When using multiple Infinity's, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Infinity should be **1(001)**; the DMX address of the second Infinity should be **1+27=28 (028)**; the DMX address of the third Infinity should be **28+27=55 (055)**, etc.

Please, be sure that you do not have any overlapping channels in order to control each Infinity correctly. If two or more Infinity's are addressed similarly, they will work similarly. For address settings, please refer to the instructions under "Addressing'.

Controlling:

After having addressed all Infinity fixtures, you may now start operating these via your lighting controller. **Note:** After switching on, the Infinity will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "**LED**" on the control panel will not flash. The problem may be:

- The XLR cable from the controller is not connected with the input of the Infinity.
- The controller is switched off or defective, the cable or connector is detective, or the signal wires are swapped in the input connector.


Note: It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

🛕 Display Off after 40 seconds 🔒

When no button is pressed for 40 seconds, the display will turn off. To light up the display, you have to press any of the buttons on the control panel. Once you have pressed the button, the display will light up.



Menu Overview

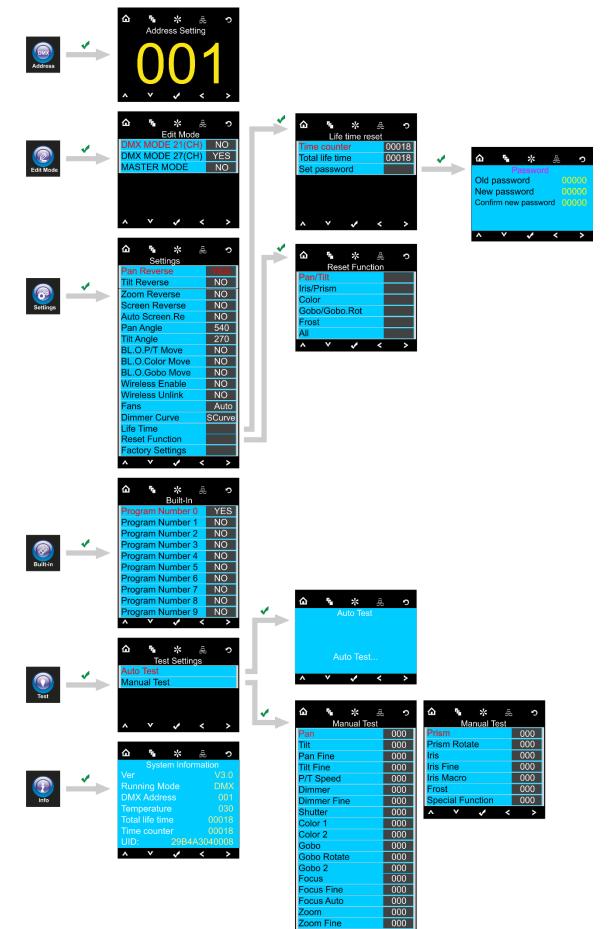



🗸 < >

Main Menu Options



DMX address



Edit Mode



Settings Menu



Built-in Programs



Test Mode



Info




5

Home
Edit Menu
Setting Mode
Address Setting
Infinity Logo



1. DMX Addressing

With this menu you can set the DMX address.

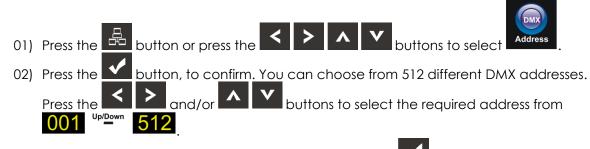

03) Once you have set the desired DMX address, press the 🗹 button to store.



2. Edit Mode

With this menu you can set your desired mode.


- 01) Press the button or press the **C > A V** buttons to select
- 02) Press the button, to confirm. You can choose from 3 different modes.
- 03) Press the buttons to select the required channel mode:

DMX MODE 21(CH)NODMX MODE 27(CH)YESMASTER MODENO

- 04) Once you have selected the desired mode, press the Substitutions to change the value from NO to YES.___
- 05) Press the **V** button to confirm your choice.
- 06) If the device has been set to Master mode, all the connected slave devices will act the same as the master device.
- 07) If the device has been set to slave, it will react the same as its master device.

3. Settings Menu

With this menu you can set your desired mode.

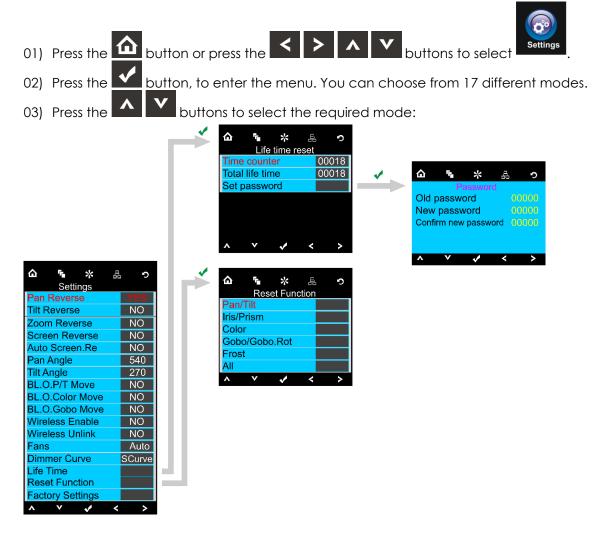

- 04) Once you have selected the desired mode, press the *selected to edition*.
- 05) Press the buttons to change the value from NO to YES.
- 06) Some of the available menus have different options to the regular YES or NO function: Pan Angle: 540°, 360°, 180°
 Tilt Angle: 270°, 180°, 90°

Fans: Auto, Silent, Full Dimmer Curve: SCurve, I Square, Square, Linear

3.1. Life Time

With this menu you can reset the device's counters.

- 01) Press the **Markov** buttons to select Life Time and press the **Markov** button to open the menu.
- 02) Press the buttons to choose one of the 3 reset options:
 - Time Counter (the time counter will be reset)
 - Total Life Time (the device's operation time counter will be reset)
 - Set Password
- 03) If you sele<u>ct Time Counter or Total Life Time, press the</u> button to open the choice selection.
- 04) Press the buttons to choose either YES or NO. Press the button to confirm.

3.1.1. Set Password

With this menu you can set the new password for the device.

- 01) Press the **Markov** buttons to select Set Password and press the **Markov** button to open the menu.
- 02) The following screen will pop up:



03) Press the buttor

04) Press the

buttons to select the digit which you want to edit.

- buttons to adjust the values.
- 05) Press the **V** button to confirm.



3.2. Reset

With this menu you can reset the device's settings.

- 01) In Settings menu, press the buttons to select Reset Function and press the button to open the menu.
- 02) Press the buttons to choose one of the 2 options:
 - Pan/Tilt (reset Pan/Tilt)
 - Iris/Prism (reset iris/prism)
 - Color (reset colors)
 - Gobo/Gobo.Rot (reset gobos)
 - Frost (reset frost effect)
 - All (restore default settings)
- 03) Once you have chosen the desired option, press the Markov button to proceed to edition.
- 04) Press the **Sector** buttons to choose between YES or NO.
- 05) Press the **V** button to confirm your choice.

3.3. Factory Settings

With this menu you can perform a complete reset of the device's settings.

- 01) In Settings menu, press the buttons to select Factory Settings and press the button to open the menu.
- 02) Press the buttons to choose either YES or NO.
- 03) Press the **W** button to confirm.

4. Built-in Programs

With this menu you can set your desired built-in program.



03) Press the buttons to select the desired built-in program.


<u>ሰ</u> ፍ	*	50	n
	Built-In		
Program	Number	0	YES
Program	Number	1	NO
Program	Number	2	NO
Program	Number	3	NO
Program	Number	4	NO
Program	Number	5	NO
Program	Number	6	NO
Program	Number	7	NO
Program	Number	8	NO
Program	Number	9	NO
Λ ٧	1	<	>

- 04) Press the <u>button</u> to confirm your choice.
- 05) Press the buttons to choose either YES or NO and press the button to confirm your choice.
- 06) The device will now run the chosen built-in program.



5. Test Menu

With this menu you can test the device's functions.

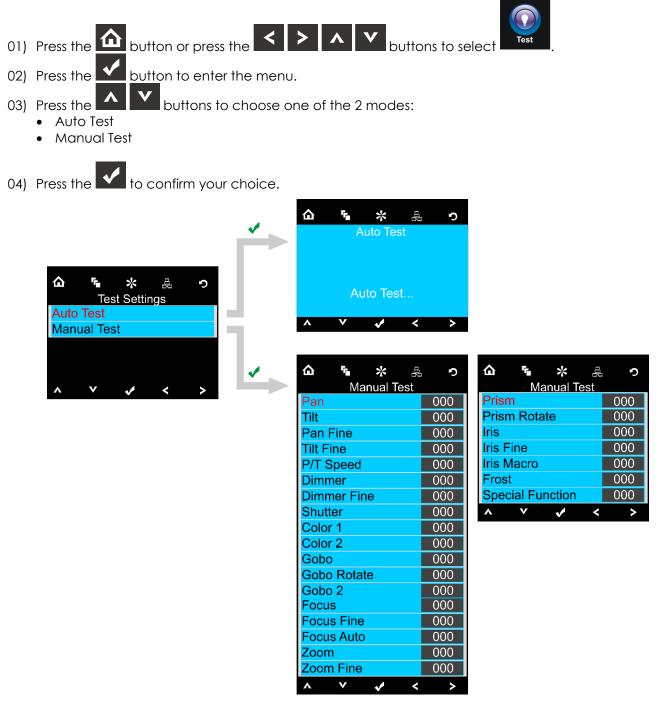

- 05) If you have selected Auto Test mode, the device will automatically test all its functions.
- 06) If you hav<u>e selected</u> Manual Test mode, press the

V buttons to select the desired option.

Infinit

- 07) Press the buttons to change the values from 0 to 255.
- 08) Once you have adjusted the desired setting, press the **Markov** button to store changes.

6. System information

With this menu you can set your desired mode.

01) Press the button or press the **< > ^ v** buttons to select



- 02) Press the **Markov** button to enter the menu.
- 03) The display will show:

仚	۲.	*		S
	Syste	em Info	rmatior	٦
Ver				/3.0
Runr	ning M	ode		DMX
DMX	Addre	ess		001
Temp	beratu	re		030
Total	life tir	ne	00	018
Time	count	ter	00	018
UID:		29B4	IA3040	8000
٨	V	✓	<	>

04) You can now view the device's current software version, current active mode, current DMX starting address, device's temperature, total life time counter, time counter and the UID number.



DMX Channels

27 channels

Channel 1 – Horizontal movement (Pan)

Move the slider up, in order to move head horizontally (PAN). Gradual head adjustment from one end of the slider to the other (0-255, 128-center). The head can be turned by 540° and stopped at any position you wish.

Channel 2 - Vertical movement (Tilt)

Move the slider up, in order to move head vertically (TILT). Gradual head adjustment from one end of the slider to the other (0-255, 128-center). The head can be turned by 270° and stopped at any position you wish.

Channel 3 – Pan fine 16-bit

Channel 4 – Tilt fine 16-bit

Channel 5 – PAN/TILT Speed

0-255	From fast to slow
	

Channel 6 – Dimmer

0-255	Dimmer intensity, from dark to brightest

Channel 7 – Dimmer fine


0-255	Dimmer intensity,	from dark to brightest
-------	-------------------	------------------------

Channel 8 – Shutter/Strobe \Lambda Dimmer must be open \Lambda

0-7	Shutter closed
8-15	Shutter open
16-131	Synchronized strobe, from low to high frequency
132-167	Fast off/slow on, from low to high frequency
168-203	Slow off/fast on, from low to high frequency
204-239	Pulse strobe, from low to high frequency
240-250	Random strobe, from low to high frequency
251-255	Shutter open

Channel 9 – Color wheel 1 \Lambda Dimmer and shutter must be open \Lambda


0-6	Open/White
7-13	Color 1
14-20	Color 2
21-27	Color 3
28-34	Color 4
35-41	Color 5
42-48	Color 6
49-59	Color 7
60-187	Split colors (gradual color wheel adjustment)
188-219	Counterclockwise rotation, from slow to fast
220-255	Clockwise rotation, from slow to fast

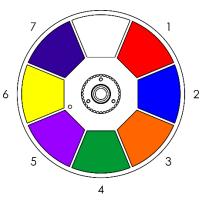



Channel 10) – Color wheel 2 \triangle Dimmer and shutter must be open \triangle	
0-6	Open/White	
7-13	Color 1 (1/2 CTO)	
14-20	Color 2 (Full CTO)	
21-27	Color 3	
28-34	Color 4	
35-41	Color 5	C
42-48	Color 6	
49-59	Color 7	
60-187	Split colors (gradual color wheel adjustment)	
188-219	Counterclockwise rotation, from slow to fast	
220-255	Clockwise rotation, from slow to fast	

.

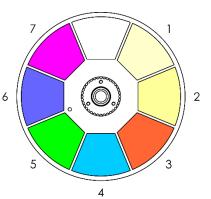

Channel 11 – Rotating gobo wheel + gobo shake 🛆 Dimmer and shutter must be open 🔬

0-7	Open / White	
8-15	Gobo 1	(()))
16-23	Gobo 2	A A A A A A A A A A A A A A A A A A A
24-31	Gobo 3	The second secon
32-39	Gobo 4	- 6 (O) (00) 2
40-47	Gobo 5	
48-55	Gobo 6	The second secon
56-63	Gobo 7	
64-71	Gobo 7 shake effect, from slow to fast	5 Storments (2 Storments 3
72-79	Gobo 6 shake effect, from slow to fast	A CONTRACTOR
80-87	Gobo 5 shake effect, from slow to fast	
88-95	Gobo 4 shake effect, from slow to fast	
96-103	Gobo 3 shake effect, from slow to fast	
104-111	Gobo 2 shake effect, from slow to fast	
112-119	Gobo 1 shake effect, from slow to fast	
120-127	Open / White	
128-191	Counterclockwise rotation rainbow effect, from slow to fast	
192-255	Clockwise rotation rainbow effect, from slow to fast	

Channel 12 – Gobo rotation \Lambda Dimmer and shutter must be open, CH11 must be set between 8-63 A

0-63	Gobo indexing
64-147	Clockwise rotation, from slow to fast
148-231	Counterclockwise rotation, from slow to fast
232-255	Gobo wheel bounce effect, from small to big amplitude

0-6	Open / White	
7-13	Gobo 1	
14-20	Gobo 2	
21-27	Gobo 3	
28-34	Gobo 4	/
35-41	Gobo 5	
42-48	Gobo 6	
49-55	Gobo 7	
56-63	Gobo 8	
64-71	Gobo 8 shake effect, from slow to fast	
72-78	Gobo 7 shake effect, from slow to fast	
79-85	Gobo 6 shake effect, from slow to fast	
86-92	Gobo 5 shake effect, from slow to fast	
93-99	Gobo 4 shake effect, from slow to fast	
100-106	Gobo 3 shake effect, from slow to fast	
107-113	Gobo 2 shake effect, from slow to fast	
114-120	Gobo 1 shake effect, from slow to fast	
121-127	Open / White	
128-191	Counterclockwise rotation rainbow effect, from slow to fast	
192-255	Clockwise rotation rainbow effect, from slow to fast	
	Continuous adjustment	
Channel 1	5 – Focus fine 🛕 Dimmer and shutter must be open 🛕	
Channel 1		
Channel 1 0-255 Channel 1	 5 – Focus fine A Dimmer and shutter must be open A Fine adjustment 6 – Auto Focus A Dimmer and shutter must be open A 	
Channel 1 0-255 Channel 1 0	 5 - Focus fine Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus Dimmer and shutter must be open A Not functional 	
Channel 1 0-255 Channel 1 0 1-36	 5 - Focus fine Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus Dimmer and shutter must be open A Not functional Auto focus (5 m) rotating gobo wheel 	
Channel 1 0-255 Channel 1 0 1-36 37-73	 5 - Focus fine Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus Dimmer and shutter must be open A Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel 	
Channel 1 D-255 Channel 1 D 1-36 37-73 74-110	 5 - Focus fine Dimmer and shutter must be open Fine adjustment 6 - Auto Focus Dimmer and shutter must be open Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel 	
Channel 1 D-255 Channel 1 D I-36 37-73 74-110 I 11-127	 5 - Focus fine A Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open A Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus rotating gobo wheel Auto focus rotating gobo wheel 	
Channel 1)-255 Channel 1) I-36 37-73 74-110 I 11-127 I 28-164	 5 - Focus fine Dimmer and shutter must be open Fine adjustment 6 - Auto Focus Dimmer and shutter must be open Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus rotating gobo wheel Auto focus rotating gobo wheel Auto focus (5 m) static gobo wheel 	
Channel 1 D-255 Channel 1 D 1-36 37-73 74-110 111-127 128-164 165-201	 5 - Focus fine Dimmer and shutter must be open Fine adjustment 6 - Auto Focus Dimmer and shutter must be open Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel 	
Channel 1 D-255 Channel 1 D 1-36 37-73 74-110 111-127 128-164 165-201 202-238	 5 - Focus fine Dimmer and shutter must be open Fine adjustment 6 - Auto Focus Dimmer and shutter must be open Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus (15 m) static gobo wheel 	
Channel 1 D-255 Channel 1 D-36 37-73 74-110 111-127 128-164 165-201 202-238	 5 - Focus fine Dimmer and shutter must be open Fine adjustment 6 - Auto Focus Dimmer and shutter must be open Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel 	
Channel 1 0-255 Channel 1 0 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255	 5 - Focus fine A Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open A Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static gobo wheel 	
Channel 1 D-255 Channel 1 D-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1	 5 - Focus fine A Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open A Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static gobo wheel 	
Channel 1 0-255 Channel 1 0 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1	 5 - Focus fine A Dimmer and shutter must be open A Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open A Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static gobo wheel 	
0-255 Channel 1 0 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1 0-255	 5 - Focus fine Dimmer and shutter must be open D Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open D Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static gobo wheel 	
Channel 1 D-255 Channel 1 D 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1 D-255	 5 - Focus fine Dimmer and shutter must be open D Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open D Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static	
Channel 1 0-255 Channel 1 0 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1 0-255	 5 - Focus fine Dimmer and shutter must be open D Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open D Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static gobo wheel 	
Channel 1 D-255 Channel 1 D 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1 D-255 Channel 1 D-255	 5 - Focus fine Dimmer and shutter must be open D Fine adjustment 6 - Auto Focus D Dimmer and shutter must be open D Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static	
Channel 1 D-255 Channel 1 D 1-36 37-73 74-110 111-127 128-164 165-201 202-238 239-255 Channel 1 D-255 Channel 1 D-255	 5 - Focus fine Dimmer and shutter must be open Fine adjustment 6 - Auto Focus Dimmer and shutter must be open 6 - Auto Focus Dimmer and shutter must be open Not functional Auto focus (5 m) rotating gobo wheel Auto focus (10 m) rotating gobo wheel Auto focus (15 m) rotating gobo wheel Auto focus (5 m) static gobo wheel Auto focus (5 m) static gobo wheel Auto focus (10 m) static gobo wheel Auto focus (15 m) static gobo wheel Auto focus static gobo wheel Auto focus attic gobo wheel Auto focus static gobo wheel	

Infinity iS-250

0-127	Prism indexing
128-189	Clockwise rotation, from fast to slow
190-193	Not functional
194-255	Counterclockwise rotation, from slow to fast
Channel 2 0-255	1 – Iris 🛕 Dimmer and shutter must be open 🛕 Gradual adjustment, from open to closed
Channel 2	2 – Iris fine 🛕 Dimmer and shutter must be open 🛕
0-255	Fine adjustment
Channel 2	3 – Iris functions 🛆 Dimmer and shutter must be open 🛕
0-63	Not functional
64-127	Open/close effect, from slow to fast
128-191	Slow open/fast close effect, from slow to fast
192-255	Fast open/slow close effect, from slow to fast
.,	
Channell	
Channel 2 0-4	4 – Frost 🕰 Dimmer and shutter must be open 🕰 Not functional
5-255	Frost effect, from 0-100%
0 200	
Channel 2	5 – Functions
0-7	Not functional
8-15	Blackout during Pan/Tilt movement
16-23	Blackout during color wheel movement
24-31	Blackout during gobo wheel movement
32-39	Blackout during Pan/Tilt/color wheel movement
40-47	Blackout during Pan/Tilt/gobo wheel movement
48-55	Blackout during Pan/Tilt/color wheel movement/gobo wheel movement
56-87	Not functional
88-95	Not functional
96-103	Reset pan
104-111	Reset tilt
112-119	Reset color wheel
120-127	Gobo wheel reset
128-135	Not functional
136-143	Reset prism
144-151	Not functional
152-159	Reset all channels
160-167	Reset iris
168-175	Reset frost
176-255	Not functional
	6 – Built-in programs 🕰 Dimmer and shutter must be open 🕰
0-7	Not functional
8-15	Built-in program 1
16-23	Built-in program 2
24-31	Built-in program 3
32-39	Built-in program 4
40-47	Built-in program 5
40-47	

Built-in program 9
Built-in program 10
Built-in program 11
Built-in program 12
Built-in program 13
Built-in program 14
Built-in program 15
Built-in program 16
Built-in program 17
Built-in program 18
Built-in program 19
Built-in program 20
Built-in program 21
Built-in program 22
Built-in program 23
Built-in program 24
Built-in program 25
Built-in program 26
Built-in program 27
Built-in program 28
Built-in program 29
Built-in program 30
Built-in program 31

Channel 27 – Built-in program speed 🕰 CH26 must be set between 8-255 🛕

Program speed adjustment, from fast to slow 0-255

21 channels

Channel 1 – Horizontal movement (Pan)

Move the slider up, in order to move head horizontally (PAN). Gradual head adjustment from one end of the slider to the other (0-255, 128-center). The head can be turned by 540° and stopped at any position you wish.

Channel 2 – Vertical movement (Tilt)

Move the slider up, in order to move head vertically (TILT). Gradual head adjustment from one end of the slider to the other (0-255, 128-center). The head can be turned by 270° and stopped at any position you wish.

Channel 3 – Pan fine 16-bit

Channel 4 – Tilt fine 16-bit

Channel 5 – PAN/TILT Speed

0-255	From fast to slow

Channel 6 – Dimmer

0-255	Dimmer intensity	r, from dark		


🙈 infinit


Channel 7 – Shutter/Strobe 🛕 Dimmer must be open 🛕

0-7	Shutter closed
8-15	Shutter open
16-131	Synchronized strobe, from low to high frequency
132-167	Fast off/slow on, from low to high frequency
168-203	Slow off/fast on, from low to high frequency
204-239	Pulse strobe, from low to high frequency
240-250	Random strobe, from low to high frequency
251-255	Shutter open

Channel 8 – Color wheel 1 \Lambda Dimmer and shutter must be open \Lambda

0-6	Open/White	
7-13	Color 1	
14-20	Color 2	
21-27	Color 3	
28-34	Color 4	
35-41	Color 5	
42-48	Color 6	
49-59	Color 7	
60-187	Split colors (gradual color wheel adjustment)	
188-219	Counterclockwise rotation, from slow to fast	
220-255	Clockwise rotation, from slow to fast	

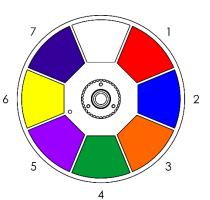

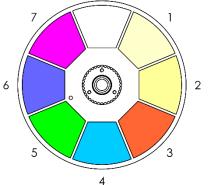

2

Channel 9 – Color wheel 2 🛆 Dimmer and shutter must be open 🔬

0-6	Open/White
7-13	Color 1 (1/2 CTO)
14-20	Color 2 (Full CTO)
21-27	Color 3
28-34	Color 4
35-41	Color 5
42-48	Color 6
49-59	Color 7
60-187	Split colors (gradual color wheel adjustment)
188-219	Counterclockwise rotation, from slow to fast
220-255	Clockwise rotation, from slow to fast


Channel 10 – Rotating gobo wheel + gobo shake \Lambda Dimmer and shutter must be open

0-7	Open / White
8-15	Gobo 1
16-23	Gobo 2
24-31	Gobo 3
32-39	Gobo 4
40-47	Gobo 5
48-55	Gobo 6
56-63	Gobo 7
64-71	Gobo 7 shake effect, from slow to fast
72-79	Gobo 6 shake effect, from slow to fast
80-87	Gobo 5 shake effect, from slow to fast
88-95	Gobo 4 shake effect, from slow to fast
96-103	Gobo 3 shake effect, from slow to fast
104-111	Gobo 2 shake effect, from slow to fast
112-119	Gobo 1 shake effect, from slow to fast
120-127	Open / White
128-191	Counterclockwise rotation rainbow effect, from slow to fast
192-255	Clockwise rotation rainbow effect, from slow to fast



Channel 11	– Gobo rotation \Lambda Dimmer and shutter must be open, CH10 must be set between 8-63 \Lambda
0-63	Gobo indexing
64-147	Clockwise rotation, from slow to fast
148-231	Counterclockwise rotation, from slow to fast
232-255	Gobo wheel bounce effect, from small to big amplitude

0-6	Open / White
7-13	Gobo 1
14-20	Gobo 2
21-27	Gobo 3
28-34	Gobo 4
35-41	Gobo 5
42-48	Gobo 6
49-55	Gobo 7
56-63	Gobo 8
64-71	Gobo 8 shake effect, from slow to fast
72-78	Gobo 7 shake effect, from slow to fast
79-85	Gobo 6 shake effect, from slow to fast
86-92	Gobo 5 shake effect, from slow to fast
93-99	Gobo 4 shake effect, from slow to fast
100-106	Gobo 3 shake effect, from slow to fast
107-113	Gobo 2 shake effect, from slow to fast
114-120	Gobo 1 shake effect, from slow to fast
121-127	Open / White
128-191	Counterclockwise rotation rainbow effect, from slow to fast
192-255	Clockwise rotation rainbow effect, from slow to fast

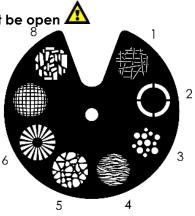

& infinity

Channel 13 – Focus 🗥 Dimmer and shutter must be open 🗥

0-255 Continuous adjustment

0	Not functional
1-36	Auto focus (5 m) rotating gobo wheel
37-73	Auto focus (10 m) rotating gobo wheel
74-110	Auto focus (15 m) rotating gobo wheel
111-127	Auto focus rotating gobo wheel
128-164	Auto focus (5 m) static gobo wheel
165-201	Auto focus (10 m) static gobo wheel
202-238	Auto focus (15 m) static gobo wheel
239-255	Auto focus static gobo wheel

Channel 15 – Zoom Dimmer and shutter must be open A0-255Gradual adjustment, from big to small

Channel 16 – 3-facet prism 🗥 Dimmer and shutter must be open \Lambda

Not functional 0-4 5-255 3-facet prism ON

Infinity iS-250

0-127	Prism indexing
128-189	Clockwise rotation, from fast to slow
190-193	Not functional
194-255	Counterclockwise rotation, from slow to fast
Channel 1	8 – Iris 🛕 Dimmer and shutter must be open 🛕
0-255	Gradual adjustment, from open to closed
~	
Channel I 0-63	9 – Iris functions 🕰 Dimmer and shutter must be open 🕰 Not functional
64-127	Open/close effect, from slow to fast
128-191	Slow open/fast close effect, from slow to fast
192-255	Fast open/slow close effect, from slow to fast
	A A
	0 – Frost 🗥 Dimmer and shutter must be open 🕰
0-4	Not functional
5-255	Frost effect, from 0-100%
Channel 2	1 – Functions
0-7	Not functional
8-15	Blackout during Pan/Tilt movement
16-23	Blackout during color wheel movement
24-31	Blackout during gobo wheel movement
32-39	Blackout during Pan/Tilt/color wheel movement
40-47	Blackout during Pan/Tilt/gobo wheel movement
48-55	Blackout during Pan/Tilt/color wheel movement/gobo wheel movement
56-87	Not functional
88-95	Not functional
96-103	Reset pan
104-111	Reset tilt
112-119	Reset color wheel
120-127	Gobo wheel reset
128-135	Not functional
136-143	Reset prism
144-151	Not functional
152-159	Reset all channels
	Reset iris
160-167	Keset IIIs
160-167 168-175	Reset frost



Channel settings

Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14
unction	Pan	Tilt	Pan-Fine	Tilt-Fine	Pan/Tilt Speed	Dimmer	Dimmer 16-bit	Shutter Strobe	Color wheel 1	Color wheel 2	Rotating Gobo wheel	Gobo Rotation	Static Gobo wheel	Focus
128	255		255		255 Slow	255	265	2255 Diutter open 2251 220 Fast Random strobe 240 Slow 240 Slow 240 Slow 204 Slow 204 Slow 204 Slow 203 Fast Pulse strobe 204 Slow 203 Fast Slow off Fast off Slow off Fast off Slow off Slow 132 Slow 131 Fast Slowe off Slow 132 Slow 135 S	220-255 (3) 188-219 (3) (4) (4) (4) (4) (4) (2) (3) (4) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2)	210-255 (30) 108-219 (30) (40) 49-59 (42-48) (200) 42-48 (200) 28-34 (21-27) (21-27) (21-27) (21-27) (200) (14-20) (200)	 192-255 128-191 122-127 122-127 122-119 104-111 96-103 88-85 80-87 72-79 72-79 64-71 56-563 40-47 32-39 	255 Gobo Bounce 232 231 Fast Gobo Rounce 1232 Stow 148 147 Fast Go Stow 46 63	192255 122-191 121-127 114-120 10-106 10-	255 Far
o	,	- Î	,	Ŧ.	0 Fast			▼ 8 ↑ 7 Shutter closed ▼ 0	7-13 Color 1	7-13 Color 1	 24-31 16-23 8-15 0-7 	Gobo rotate Index	 21-27 14-20 7-13 0-6 	Near 0

41502 I n	finity IS-250 Fixtu	re-settir	ngs									
15	16	17	18	19	20	21	22	23	24	25	26	27
Focus 16-bit	Auto Focus	Zoom	Zoom 16-bit	Prism	Prism Rotation	Iris	Iris 16-bit	Iris Functions	Frost	Functions	Built-in Programs	Program Speed
255 Far	239-255 Auto focus static gobo wheel 202-238 Auto focus (15 m) static gobo wheel	255 - Small	255 - Small	255	255 Fast	255 Closed	255 Closed	▲ 255 Fast Fast open Slow close	255 Frost Effect	176-255 No Function 168-175 Reset Frost Effect 160-167 Reset Iris	248-255 Built-in Program 31 240-247 Built-in Program 30 232-239 Built-in Program 29 224-231 Built-in Program 28 216-223 Built-in Program 27	255 Slow
	185-201 Auto focus (10 m) static gobo wheel				▼ 194 Slow 193 Stop			192 Slow 191		152-159 Reset All Channels 144-151 No Function 136-143 Reset Prism 128-135 No Function	208-215 Built-in Program 26 200-207 Built-in Program 25 192-199 Built-in Program 24 184-191 Built-in Program 23 176-183 Built-in Program 22 168-175 Built-in Program 21	
	128-164 Auto focus (5 m) static gobo wheel			Static 3-facet	190 189 Slow			Slow open Fast close		120-127 Reset Gobo wheel 112-119 Reset Color wheel 104-111 Reset Till	160-167 Built-in Program 20 152-159 Built-in Program 19 144-151 Built-in Program 18 136-143 Built-in Program 17	
127	111-127 Auto focus rotating gobo wheel 74-110 Auto focus (15 m) rotating gobo wheel			Prism	Positive 128 Fast 127 Fast			▼ 128 ▲ 127 Fast		96-103 Reset Pan 88-95 No Function 56-87 No Function	128-135 Built-in Program 16 120-127 Built-in Program 15 112-119 Built-in Program 14 104-111 Built-in Program 13 96-103 Built-in Program 12 88-95 Built-in Program 11	
	37-73 Auto focus (10 m) rotating gobo wheel				Prism rotate Index			Open/close effect	V	48-55 Biackaut during Pan/Tit/Color wheel/Golo wheel 40-47 Pan/Tit/Color wheel 32-39 Pan/Tit/Color wheel	80-95 Built-in Program 11 80-87 Built-in Program 10 72-79 Built-in Program 9 64-71 Built-in Program 7 56-63 Built-in Program 7 49-55 Built-in Program 6	
Vear	1-36 Auto focus (5 m) rotating gobo wheel	\bigcirc	$\left \bigcirc \right $	5 4 Open			• 0 Open	♥ 64 Slow 0-63 No Function	5 4 No Fucntion	24-31 Blackout during Gobo wheel movement 16-23 Blackout during Color wheel movement 8-15 Blackout during Pan/Tit	40-47 Built-in Program 5 32-39 Built-in Program 4 24-31 Built-in Program 3 16-23 Built-in Program 2 8-15 Built-in Program 1	
0	0 No Function	0 - Big	0 - Big	¥ U	* 0	¥ 0 Open	¥ 0 Open	0-03 NO FUNCTION		0-7 No Function	0-7 No Function	0 Fast

Fig. 06



Maintenance

The Infinity iS-250 requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light output will be significantly reduced. Disconnect the mains power supply and then wipe the cover with a damp cloth. Wipe the front glass panel clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. The front glass panel will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the light output very quickly. Do not immerse in liquid.

The cooling fans, color wheel, the gobo wheel, the gobos and the internal lenses should be cleaned monthly with a soft brush.

Please clean internal components once a year with a light brush and vacuum cleaner.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

The operator has to make sure that safety-related and machine-technical installations are to be inspected by an expert after every year in the course of an acceptance test.

The operator has to make sure that safety-related and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 01) All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
- 02) There may not be any deformations on housings, fixations and installation spots.
- 03) Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
- 04) The electric power supply cables must not show any damages or material fatigue.


Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below.

- 01) Unplug the unit from electric power source.
- 02) Insert a screwdriver into the slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push a bit (Turn and Push). The fuse will come out.
- 03) Remove the used fuse. If brown or unclear, it is burned out.
- 04) Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Replacing a Gobo From the Rotating Gobo Wheel

- 01) Disconnect mains power supply and set the switch to OFF.
- 02) Make sure that the gobo you want to insert has the same size. For the right size, see below. Glass gobo Plastic gobo Metal gobo

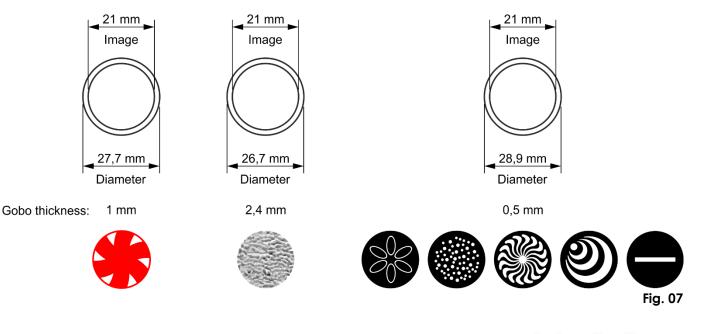

Infini


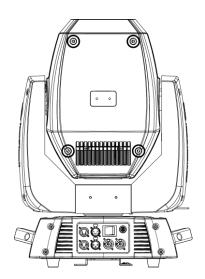


Fig. 08


- 03) Remove the lamp cover by removing the 4 screws (see fig. 08).
- 04) Gently tilt the head so the small metal housing will slide out more easy.
- 05) Turn the gobo wheel, with the gobo you want to remove, to the upside.
- 06) Gently lift up the gobo holder 10° and then gently pull out the gobo from its position.

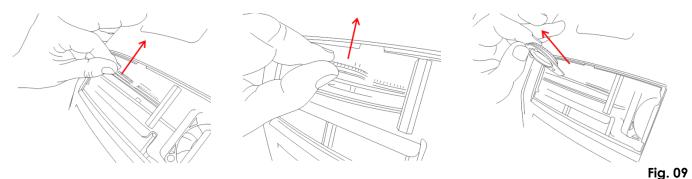

- 07) Very carefully take the gobo out of the gobo holder with a pair of pliers.
- 08) Place the new gobo in the gobo holder. Carefully put the pinchcock back, gently press the pinchcock a little bit together. Possibly use a pair of pliers to press the pinchcock a little bit together.
- 09) Put the gobo holder back under the pressing snap and push it back.
- 10) Replace the maintenance caps and fasten all screws.


Glass Gobo Orientation

Coated glass gobos are inserted with the coating against the rim of the holder (away from the spring). Textured gobos are inserted with the smooth side against the spring. This provides the best results when combining rotating gobos.

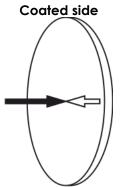


When an object is held up to the coated side there is no space between the object and its reflection. The back edge of the gobo cannot be seen when looking through the coated side.




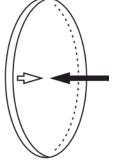

When an object is held up to the uncoated side there is a space between the object and its reflection. The back edge of the gobo can be seen when looking through the uncoated side.



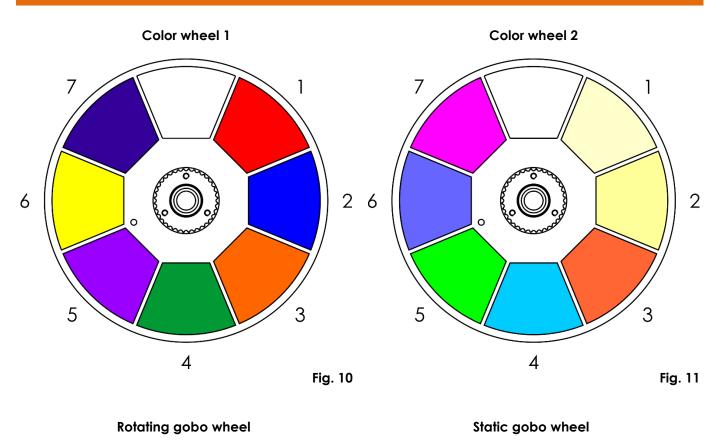

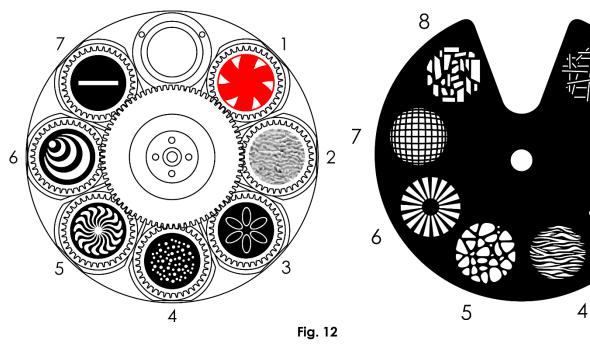

1

2

3

Fig. 13

Troubleshooting

No Light

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the light effect does not operate properly, refer servicing to a technician.

Suspect four potential problem areas as: factory reset, the power supply, the LED, the fuse.

01) First try to reset the device to its original factory default settings (3. Settings Menu see page 16).

- 02) Power supply. Check that the unit is plugged into an appropriate power supply.
- 03) The LEDs. Return the Infinity to your Infinity dealer.
- 04) The fuse. Replace the fuse. See page 30 for replacing the fuse.
- 05) If all of the above appears to be O.K., plug the unit in again.
- 06) If you are unable to determine the cause of the problem, do not open the Infinity, as this may damage the unit and the warranty will become void.
- 07) Return the device to your Infinity dealer.

No Response to DMX

Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

- 01) Check the DMX setting. Make sure that DMX addresses are correct.
- 02) Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
- 03) Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products ? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

See next page for more problem solving.



Infinity iS-250


Problem	Probable cause(s)	So	Solution				
One or more fixtures do not function at all	No power to the fixture	•	Check if power is switched on and cables are plugged in				
	Primary fuse blown	•	Replace fuse				
Fixtures reset	The controller is not connected.	•	Connect controller.				
correctly, but all respond erratically or not at all to the controller	3-pin/5-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed)	•	Install a phase reversing cable between the controller and the first fixture on the link				
	Poor data quality	•	Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link				
Fixtures reset	Bad data link connection	•	Inspect connections and cables. Correct poor connections. Repair or replace damaged cables				
correctly, but some respond erratically or not	Data link not terminated with 120 Ohm termination plug	•	Insert termination plug in output jack of the last fixture on the link				
at all to the	Incorrect addressing of the fixtures	•	Check address setting				
controller	One of the fixtures is defective and disturbs data transmission on the link	•	Bypass one fixture at a time until normal operation is restored: unplug both connectors and connect them directly together. Have the defective fixture serviced by a qualified technician				
	3-pin/5-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed)	•	Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture that behaves erratically				
Shutter closes suddenly	The color wheel, gobo wheel or a gobo has lost its index position and the fixture is resetting the effect	•	Contact a technician for servicing if the problem persists				
No light or LEDs	Fixture is too hot	• • •	Allow the fixture to cool down Clean the fan Make sure air vents and the front lens are not blocked Turn up the air conditioning				
cuts out intermittently	LEDs damaged	•	Disconnect the fixture and return it to your dealer				
	The power supply settings do not match local AC voltage and frequency	•	Disconnect fixture. Check settings and correct if necessary				



Product Specifications

Model:	Infinity iS-250						
Input voltage:	100-240V AC, 50/60Hz						
Power consumption:	430W						
DMX linking:	30pcs						
Fuse:	F7AL/250V						
Dimensions:	346 x 417 x 582 mm (LxWxH)						
Weight:	25,4 kg						
Operating and Program	mina:						
Signal pin OUT:	Pin 1 (earth), pin 2 (-), pi	n 3 (+)					
DMX Mode:	21, 27 channels						
Signal input:	3-pin/5-pin XLR IN						
Signal output:	3-pin/5-pin XLR OUT						
Electro-mechanical effe							
Light source:	1 x 250W White LED (Lun	niEngin)					
Lux @1m:	102400 (12°)						
Rotating gobo wheel:		etal gobos (replaceable)					
Gobo size:		obo size); 21 mm (image diameter); 1 mm (gobo thickness)					
	Plastic gobo: 26,7 mm (gobo size); 21 mm (image diameter); 2,4 mm (gobo						
	thickness)						
		gobo size); 21 mm (image diameter); 0,5 mm (gobo					
	thickness)						
Static gobo wheel:	8 metal gobos						
Gobo functions:	Gobo-flow effect, gobo shake						
Color wheel 1:	7 dichroic-filters + white						
Color wheel 2:	7 dichroic-filters + white						
Color functions:	Split colors, Rainbow-flov	weffect					
Beam angle:	12° - 27°						
Dimmer:	0-100%						
Strobe:	0-20Hz						
Pan:	540°						
Tilt:	270°						
Focus:	Motorized						
lris:	Motorized						
Prism:	3-facet rotating prism						
Special:	Pan/ Tilt, Color, Gobo ch	nange blackout, User-selectable Pan & Tilt ranges,					
	540°/360°/180°, Reverse	Pan / Tilt movement					
Housing:	Metal & flame retardan	t plastic					
IP rating:	IP20						
DMX control:	via standard DMX-controller						
Onboard:	Battery-powered full col	lor display including gravity sensor					
Battery lifetime:	max 30 days (full charge	9)					
Control:	Built-in programs, Maste	r/Slave, DMX-512					
Color:	Black						
Connections:	Dedicated PowerCON t	to Schuko & data connector					
IP rating:	IP20						
		40%					
Max. ambient temperat		40°C					
Max. housing temperate	ле тв:	80°C					
Minimum distance:							
Minimum distance from	flammable surfaces:	0,5 m					
Minimum distance to lig		1 m					

Dimensions

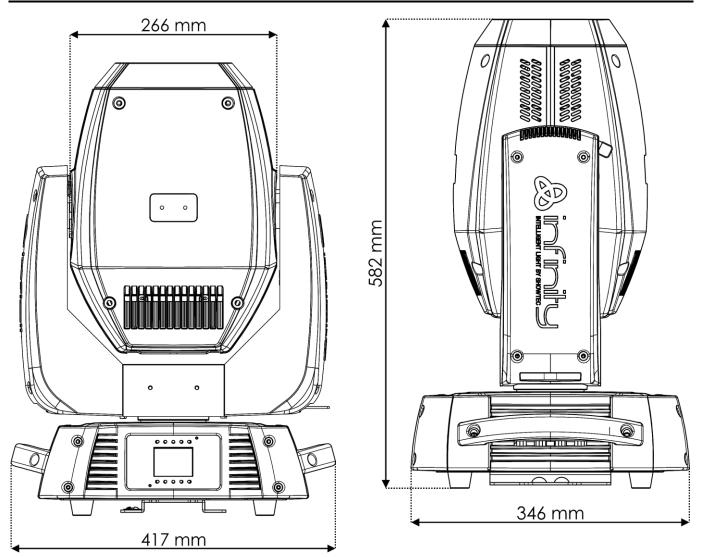

Design and product specifications are subject to change without prior notice.

CE

Website: <u>www.highlite.nl/</u> Email: <u>service@highlite.nl</u>

Infinity iS-250
Notes









©2017 Infinity